

Knock Sensor



Sensor Pin	Output	ECU Pin Type
Pin 1	Signal	Knock 1
Pin 2	Ground	Sensor Ground
Polarity does not matter when wiring this sensor		

