


Crank (VR) Sensor

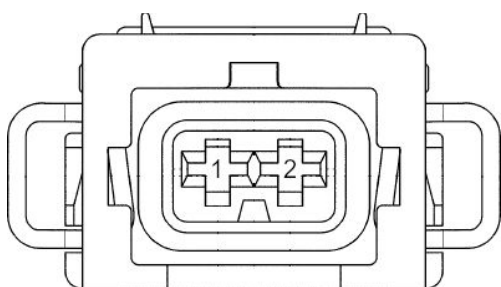

Sensor Pin	Output	ECU Pin Type
Pin 1	VR+	VR+
Pin 2	VR-	VR-
Polarity does not matter when wiring this sensor		