


Throttle Position Sensor

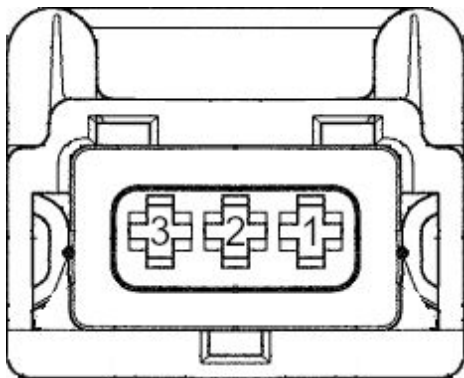

Sensor Pin	Output	ECU Pin Type
Pin 1	Ground	Sensor Ground
Pin 2	Signal	ANA V
Pin 3	Reference Voltage	5v ref

Calibration Data

The calibration for this sensor is based on fitment. Use the TPS Calibration Wizard inside the ECU to calibrate the TPS.