

Vauxhall Crank Sensor



Sensor Pin	Output	ECU Pin Type
Pin 1	Not Connected	Not Connected
Pin 2	VR-	VR-
Pin 3	VR+	VR+

